

CUSTOMER PROTECT ESSENTIAL WORRY FREE WARRANTY

If your vehicle goes wrong it's inconvenient, aggravating and potentially costly. The Customer Protect Essential Warranty helps to ease the stress and minimise the strain on your wallet.



Extended service intervals - 12 months or 12,000 miles



£50 contribution to vehicle recovery¹



Air-conditioning
In the event of a valid claim, maximum contribution to system re-gas is £60.00 inc VAT.



Anti-lock brakes



Turbo

SIGNIFICANT BENEFITS

- ^ Day one protection.
- ^ Includes parts, labour and VAT.
- ^ National repair network.
- ^ Three to 36 month options available.
- ^ Straightforward claims process.
- ^ Fast payment of valid claims.

UPGRADE AVAILABLE*

100K

Failure due to wear and tear on turbo for vehicles up to 10 years or 100,000 miles at time of claim.



Multimedia Systems



Catalytic converters



Diesel particulate filters

**Additional fee required.*

¹Recovery

For an additional fee, you can take advantage of our full, dynamic recovery service. Please ask for details.

WATCH OUR VIDEO

TEXT: 4WARRANTY to 88802



Motor Industry Code of Practice for

Vehicle Warranties



SMMT and the SMMT logo are registered trademarks of SMMT Limited and are used with their permission.



ESSENTIAL
WARRANTY

CUSTOMER PROTECT ESSENTIAL

PARTS INCLUDED



These specifically listed components are included against a mechanical breakdown during the warranty period, provided that the terms and conditions of the agreement are fully complied with. Any component not listed is specifically excluded.

THE COST OF A BREAKDOWN CAN BE PAINFUL

ENGINE (MECHANICAL COMPONENTS)

- ⤴ Rocker assembly including hydraulic followers
- ⤴ Inlet and exhaust valves
- ⤴ Inlet and exhaust valve springs and guides
- ⤴ Buckets, shims, collets, cam journals and cam bearings
- ⤴ Cylinder head
- ⤴ Cylinder head gasket
- ⤴ Camshaft and followers
- ⤴ Timing gears and chains
- ⤴ Oil pump
- ⤴ Pistons and rings
- ⤴ Cylinder bores, con rods, gudgeon pins and bearings
- ⤴ Crankshaft and bearings
- ⤴ Inlet manifold
- ⤴ Flywheel and ring gear
- ⤴ Crank main bearings, crank big end bearings and con rod small end bearings, main journal caps and big end caps (excluding crank balance shaft and drive unit).
- ⤴ Timing belts
- ⤴ Turbo charger unit

Excluding cracked or porous cylinder heads and bores, carbon deposits, skimming/ pressure testing, burnt valves and timing chain/belt tensioners and guides.

ENGINE MANAGEMENT

- ⤴ Engine Electronic Control Unit

ENGINE COOLING SYSTEM

- ⤴ Water pump
- ⤴ Thermostat and thermostat housing
- ⤴ Engine cooling fan
- ⤴ Radiator
- ⤴ Engine oil cooler and heater matrix only

FRONT WHEEL DRIVE

- ⤴ Drive shafts including constant velocity joints
- ⤴ Universal joints and couplings
- ⤴ Outer constant velocity joint housing, inner race, cage and bearings
- ⤴ Outer drive shaft housing
- ⤴ Driven axle wheel bearing inner race, cage and bearings

Excluding gaiters.

WORKING MATERIALS

- ⤴ Oils, oil filter
- ⤴ Antifreeze

MANUAL GEARBOX

- ⤴ All internal mechanical components
- ⤴ Internal gears
- ⤴ Syncromesh and syncromesh hubs
- ⤴ Gear lever
- ⤴ Speedo drive
- ⤴ Selector forks and selector shafts
- ⤴ Bearings, input, output and lay shafts and bushes

Excluding external selector mechanisms, all electrical components and oil seals and leaks.

AUTOMATIC GEARBOX

- ⤴ All internal mechanical components
- ⤴ Internal gears
- ⤴ Gear lever
- ⤴ Sun and planet gears and carriers
- ⤴ Brake bands
- ⤴ Clutch steel discs and clutch drums (excluding friction linings)
- ⤴ Valve block, pressure valves and internal main shafts and pressure seals

Excluding external selector mechanisms, all electrical components and oil seals and leaks.

AIR CONDITIONING

- ⤴ Compressor unit

TORQUE CONVERTER

- ⤴ All internal mechanical components
- ⤴ Pump
- ⤴ Turbine
- ⤴ Stator and lock-up clutch
- ⤴ Bearings and internal bushes

Excluding all electrical components and oil leaks.

DIFFERENTIAL

- ⤴ All internal mechanical components
- ⤴ Crown wheel and pinion
- ⤴ Planet gears and pins
- ⤴ Main input bearing and input seal
- ⤴ Output bearings (excluding output seals)

Excluding all electrical components and oil leaks.

CLUTCH

- ⤴ All internal mechanical components
- ⤴ Master cylinder
- ⤴ Slave cylinder
- ⤴ Release bearing
- ⤴ Pressure plate
- ⤴ Centre disc and oil contamination for centre plate only

Excluding frictional material.

STEERING (INCL POWER ASSISTED)

- ⤴ Steering rack and pinion
- ⤴ Steering box and pump
- ⤴ Steering lock

Excluding gaiters.

PROPSHAFT

- ⤴ Universal joints, couplings and propshaft bearing

FRONT AND REAR SUSPENSION

- ⤴ Coil springs
- ⤴ Upper and lower wishbones and ball and swivel joints
- ⤴ Suspension arms
- ⤴ Tie rod ends
- ⤴ Anti-roll bar links
- ⤴ Track rod ends

Excluding bushes.

ELECTRICAL SYSTEM

- ⤴ Starter motor and alternator
- ⤴ Electric window motors and switches
- ⤴ Sunroof motor and switch
- ⤴ Central locking motors
- ⤴ Front and rear windscreen wiper and washer motors
- ⤴ Heater fan motor
- ⤴ Heater motor resistor
- ⤴ Multifunction stalk switch and horn
- ⤴ Immobiliser/alarm
- ⤴ Clock
- ⤴ Switches: headlight, door, interior light, front and rear fog light, heated rear window, heated front window

FUEL INJECTION SYSTEM

- ⤴ Mechanical or electrical fuel pumps
- ⤴ Tank sender unit
- ⤴ Throttle body
- ⤴ Airflow meter
- ⤴ Idle control valve
- ⤴ Throttle potentiometer
- ⤴ Pressure regulator
- ⤴ Map sensor
- ⤴ Pedal and throttle body potentiometer
- ⤴ Pressure sensor including fuel rail when not available separately

Excluding injectors and glow plugs.

REAR WHEEL DRIVE

- ⤴ Rear half shaft bearings and shaft
- ⤴ Rear constant velocity joint housings
- ⤴ Driven axle wheel bearing inner race, cage and bearings

Excluding gaiters.

BRAKES

- ⤴ Master Cylinder
- ⤴ Wheel Cylinders
- ⤴ Caliper
- ⤴ Servo
- ⤴ Restrictor valve
- ⤴ ABS modulator and wheel speed sensors

Excluding seizure and corrosion.

WHEEL BEARINGS

- ⤴ Front and rear wheel bearings

CASINGS


COLOUR CODING KEY

- ⤴ Are included as long as they have been replaced in line with manufacturer's schedules. (proof required)
- ⤴ Are included only if it is essential to replace them as part of an agreed claim.
- ⤴ If any of the included parts fail and this damages the casings they will be included only as part of an agreed claim.

EXCLUDED


Exclusions apply as detailed in the warranty agreement schedule.

ALTERNATOR

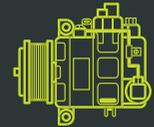

£291

HEAD GASKET

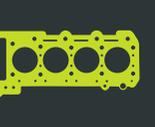

£476

DIFFERENTIAL



£1946

WATER PUMP



£198

BRAKE CALLIPERS



£157

Prices include parts, labour and VAT.

The listed components are subject to the terms as described in your warranty agreement and are also subject to certain limitations in the maximum amount paid in the event of a breakdown. Please ask your supplying dealer for further details. Your statutory rights are not affected by the terms of this Mechanical Breakdown Warranty.